

# Operating Instructions

## Washing Machine

### ISE 1606W

*Dear ISE customer,*

*Thank you for choosing this quality product from Scandinavia, which was made in Sweden.*

*We want you to feel assured that the inside of your new machine is just as good as the outside and that the ethics and standards that went into the production of this machine are just as high as the quality and performance that you will receive from it. We hope that this product will give you many years of pleasure.*

*To ensure that you get the most out of your new machine, we recommend that you read the operating instructions before using the machine. The operating instructions also contain information on how to avoid damaging the environment.*



# Contents

<b>Before using your machine for the first time</b>	4	<b>Washing</b>	11
Transport protection	4	Sort your laundry.	11
Packing material	4	Turn on the main power switch.	11
Washer door	4	Open the washer door and load the washing	11
Checking water hardness	4	Add detergent and fabric softener, as required	11
<b>Safety instructions</b>	5	Select the programme	12
General	5	Select options and settings	14
Installation	5	Close the door and press the Start/Stop button	15
Overflow guard function	5	Once the program has finished	15
Transport/Winter storage	5	<b>Care and cleaning</b>	16
Recycling	5	Checking the filter and drainage pump	16
<b>Child safety</b>	6	Cleaning the detergent compartment	16
Keep an eye on children!	6	Cleaning the outside of the machine	16
Automatic door opening	6	Cleaning the inside of the machine to avoid unpleasant smells	17
<b>Description of the washing machine</b>	7	Rinse holes under the agitator	18
<b>Detergent compartment</b>	7	If you have hard water	18
<b>Front panel</b>	8	<b>Troubleshooting</b>	19
<b>Options button</b>	8	The washer door will not open	19
<b>Advice and tips before washing</b>	9	The machine will not start	19
Sorting your laundry	9	Error messages	20
Clothing	9	<b>Technical information</b>	21
Laundry labels	9	Technical data	21
Laundry label symbols	9	Standard tests	21
Coloured cotton	10	<b>Transport protection</b>	22
Delicates	10	<b>Installation</b>	23
Wool and silk	10	Positioning the washing machine	23
Artificial fibres and synthetic fibres	10	Adjusting the feet	23
Save time and energy	10	Connection to water supply	23
Economy and efficiency	10	Drainage connection	24
Detergents	10	Electrical installation	24
		Programme plate in multiple languages	24

# Contents

<b>Service</b>	25
Before contacting the service division	25
<b>Quick guide</b>	28
Washing	28
Load the laundry	28
Detergent compartment	28
Select the programme	28
Program finished	28

# Before using your machine for the first time

## Transport protection

Has the transport protection been removed?  
If not, see the "Transport protection" chapter.

## Packing material

Please sort waste materials in accordance with local guidelines.

## Washer door

- The washer door cannot be opened until the machine is connected to the electricity supply.
- To open the door manually, see the section "The door will not open" in the "Troubleshooting" chapter.
- It is not possible to start the machine with the door open.
- To open the washer door while a programme is running, see the section entitled "Close the door and press the Start/Stop button".

## Checking water hardness

The quantity of detergent needed depends, amongst other things, on how hard the water is. Phone your local water company to check the water hardness in your area.

### Note!

Each machine is tested before leaving the factory. A small amount of water may remain in the drain pump, though this does not affect quality or damage the machine.

**See the Quick guide on the last page.**

# Safety instructions



## General

- Read the operating instructions and keep them in a safe place!
- Installation of water and electricity, if required, should be carried out by a qualified professional.
- The machine should only be used for washing items as described in these instructions. It is not intended for dry cleaning!
- Please use only detergent intended for machine washing!
- Remove any transport protection devices before using the machine, see the “Transport protection” chapter.
- Repairs and maintenance relating to safety or performance must be carried out by a qualified professional.
- Damaged mains cables must only be replaced by a qualified electrician.

## Installation

See the “Installation” chapter.

## Overflow guard function

If the machine's water level rises above the normal level, the overflow guard function begins to pump water out and shuts off the water intake. If the water level has not dropped within 60 seconds, the program is terminated.

## Transport/Winter storage

If the machine is to be transported or stored in unheated premises where the temperature can fall below freezing, do as follows:

- Empty the filter and drainage pump (see the “Care and cleaning” chapter).
- Shut off the water to the washing machine, loosen the supply hose to the intake valve and let the water run out from the valve and hose.
- After emptying the pump, a small amount of water may remain in the machine. This does not affect quality or damage the machine.

## Recycling

This machine is manufactured and labelled for recycling. In order to prevent injuries, the machine must be made unusable once the decision has been taken to dispose of it. Contact your local authority for information about where and how your machine can be recycled correctly.

# Child safety



## Keep an eye on children!

- Always close the door and start the programme immediately once you have added detergent.
- Do not allow small children to use or play with the washing machine.
- Store detergent and fabric softener out of the reach of children!

## Automatic door opening

The machine comes with an automatic door opening function, which means that the door opens automatically once the programme has finished.


If you wish to prevent small children or pets from climbing into the machine, you can deactivate the automatic door opening function.

1. Turn off the machine using the main power switch.
2. Press the Door Open button while simultaneously pressing the main power switch. Release the buttons.
3. Press the Key button and the red field goes out. Automatic door opening is now deactivated.
4. Press the Start/Stop button to store the setting.

If you want to reactivate the function, follow the instructions above. When you press the button with the key symbol (point 3), the red fields light up. Store the setting by pressing the Start/stop button.


# Description of the washing machine

1. Detergent compartment
2. Main power switch
3. Programme panel
4. Type plate
5. Hatch - drainage pump
6. Drainage pump (behind hatch)
7. Washer door
8. Outer door (not all models)

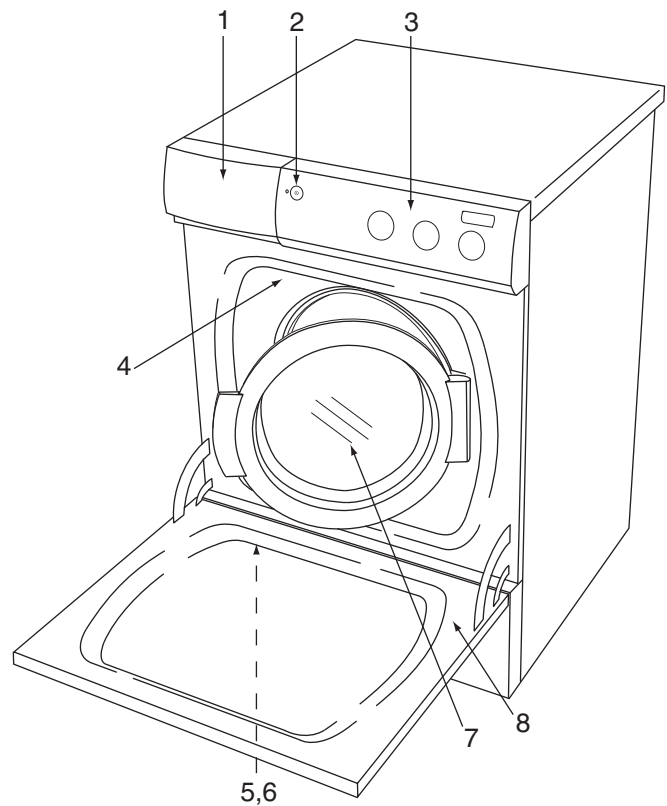


## Detergent compartment

1. Detergent compartment - pre-wash
2. Detergent compartment - main wash
3. Fabric softener compartment

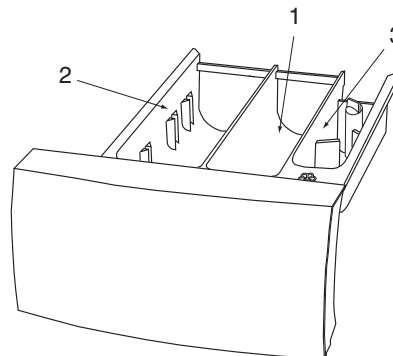


# Front panel

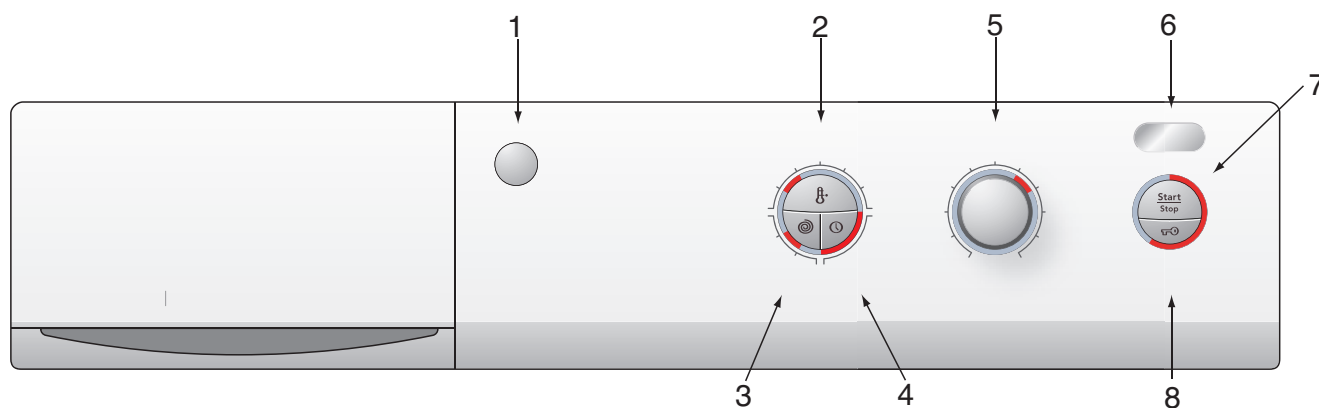

- 1. Main power switch
- 2-4. Options buttons
- 5. Programme selector

- 6. Display window
- 7. Start/Stop
- 8. Door opening

## Options button

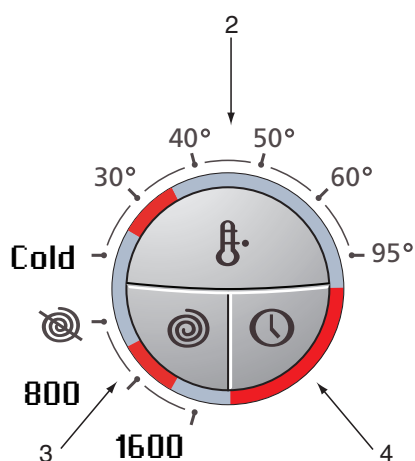

- 2. Button for selecting Temperature
- 3. Button for selecting Spin speed
- 4. Button for selecting Delayed Start



# Advice and tips before washing

Here are some tips that may help you before washing.


## Sorting your laundry

Sort items according to:

- how soiled they are
- colour
- material

## Clothing



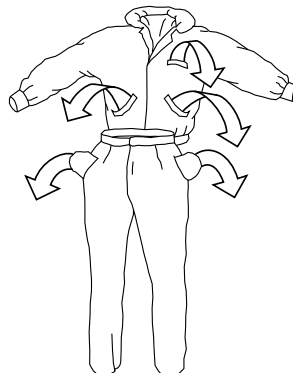




- Do up zips so that they don't harm fabrics.
- New coloured items may contain excess dye and should therefore be washed separately the first few times.
- Turn delicate items inside out. This reduces the risk of burling and fading.
- Empty pockets and wash them inside out if possible!



## Laundry labels

 Look at the item's laundry label. The table below shows suitable wash programmes for different materials and wash loads. Using modern washing machines and detergents, for example compact detergents, you can usually wash at lower temperatures. It is a good idea to use trial and error to find out what produces the best results.

## Laundry label symbols

Laundry labels	Material	Program	Load
	Cotton, linen, white and light-coloured items.	White cotton 60°C to 95°C	1/1 drum
	Cotton, linen. Dark-coloured items.	Coloured cottons 60°C	1/1 drum
	Polyester, cotton/polyester, nylon. White items.	Synthetic 60°C	1/2 drum
	Rayon, acetate, acrylic. Non-colourfast items.	Synthetic 40°C	1/2 drum
	Polyester, cotton/polyester, nylon. Coloured items.	Synthetic 40°C	1/2 drum
	Silk and very delicate items	Synthetic 30°C	1/3 drum
	Items labelled with the IWS or Superwash mark	Wool/Hand 40°C	1/3 drum

# Advice and tips before washing

## Coloured cotton

Coloured cotton items with the washing instruction 60°C should be washed at 60°C for the first time in order to remove any excess dye. If you do not do so, there is a risk that the colour will run. Use detergent without bleach in order to preserve the colour of the fabric.

## Delicates

### Unbleached linen

Unbleached linen fabrics should be washed at 60°C, using detergent containing no bleach or optical whiteners. Heavily-soiled linen can occasionally be washed at higher temperatures, but not too often because the heat can destroy the linen's shine and strength.

## Wool and silk

These fabrics are sometimes labelled as machine washable and sometimes as hand wash. The machine's Wool/Hand programme is just as gentle as washing by hand.

Wool is especially sensitive to processes such as washing.

If you do not wish to spin dry, you can squeeze out the water using terry towels. In this case select No spin.

To find out how to select this setting, see the Washing chapter. However, most garments can withstand a short spin. Choose a short spin by selecting a spin speed of 800 rpm or less.

## Artificial fibres and synthetic fibres

These materials require plenty of room to prevent them from getting creased. Only fill the drum half full when washing artificial or synthetic fibres. Choose a short spin by selecting a spin speed of 800 rpm or less.

### Note!

Viscose and acetates are fragile when wet.

## Save time and energy

Use the Cotton eco programme to save time and energy. This programme has a shorter main wash than Normal, but is often sufficient for lightly soiled washing.

## Economy and efficiency

You can save a lot of energy by not using higher temperature programs than necessary.

- Select Quick if you just need to freshen up shirts or exercise clothes, for example. This will save both water and energy.
- If you select a fast spin speed, this reduces energy consumption when drying in a tumble dryer or drying cabinet.
- Always wash with a full load when using the Heavy, White cotton, Coloured cottons and Cotton eco programmes!
- Avoid washing with pre-wash. Modern machines and detergents clean without pre-wash. Only very heavily soiled laundry such as overalls and similar garments are likely to need a pre-wash.

## Detergents

Eco-labelled detergents are less harmful to the environment.

Detergent overdosing does not give better washing results; it merely causes a greater impact on the environment.

Try to use less detergent, and increase only if you are not satisfied with the results.

### Note!

Because of environmental concerns we discourage the use of strong chemicals.

When using agents for bleaching or stain removal, there is a risk of rust (corrosion) and discolouration of the machine.

# Washing

## 1 Sort your laundry.

See the "Advice and Tips" section before washing.

### Note!

Place underwired bras in a laundry net.

### Note!

Empty pockets. Coins, nails and the like can cause damage to the machine and fabrics. See the "Advice and Tips" section before washing.

## 2 Turn on the main power switch.

## 3 Open the washer door and load the washing


If the door is closed, press the Door opening button (key symbol). The red field lights up and the door opens after a few seconds. Load the laundry. The laundry programme chart shows how much laundry can be washed with each programme.

## 4 Add detergent and fabric softener, as required

The detergent packaging will have recommendations for how much detergent you should use. The machine holds 7kg of laundry. If you only have a small amount of laundry in the machine, you can reduce the amount of detergent used.

### Powder detergent

Pour the powder into the compartment for the main wash, and pre-wash as well if desired.

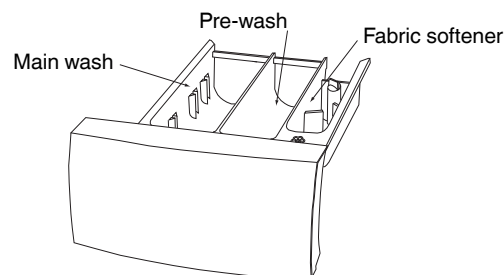

### Liquid detergent

When using liquid detergent, follow the detergent manufacturer's recommendations. We recommend always using a wash ball with very thick liquid detergent.

### Wash ball or net


If you use a wash ball or net, place it directly in the drum and select a programme without pre-wash.

### Note!

Detergent overdosing does not give better washing results; it merely causes a greater impact on the environment.

Try using less detergent, and increase only if you are not satisfied with the results.

### Fabric softener

Pour the fabric softener into the compartment with the  symbol. Follow the recommendations on the fabric softener packaging.


### Note!

Do not fill above the compartment's maximum fill level. Otherwise fabric softener will run in too early, which impairs the washing effect.

# Washing

## 5 Select the programme

You can select a programme by turning the programme selector. A red field lights up beside the selected programme and the estimated programme time appears on the display. Start the programme by pressing the Start/Stop or go on to options and settings.

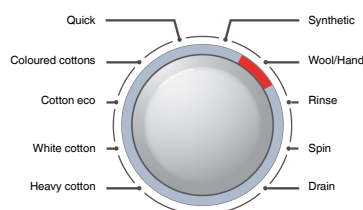

### Heavy cotton

Program for heavily soiled laundry, with dirt that needs to be fully dissolved before the main wash. A pre-wash is used to do this. You can select the temperature freely, so follow the washing instructions for each garment. The highest temperature, 95°C, is suitable for very heavily soiled laundry. The spin speed can be selected freely. The machine adapts the program time and water consumption to the load size.

### White cotton

Program for normally to heavily soiled laundry, whites and colors. You can select the temperature freely, so follow the washing instructions for each garment. 60°C is a good temperature for heavily soiled cotton garments, as well as for garments worn next to the skin. Select 40°C if the laundry is less soiled. The spin speed can be selected freely. The machine adapts the program time and water consumption to the load size.

### Cotton eco

A standard program for lightly to moderately soiled laundry. The temperature can be selected freely, so follow the washing instructions for each garment. Garments worn next to the skin ought to be washed at 60°C. The spin speed can be selected freely. The machine adapts the program time and water consumption to the load size.

### Coloured cottons

Standard program for lightly soiled laundry. The temperature can be selected freely, so follow the washing instructions for each garment. Garments worn next to the skin ought to be washed at 60°C. Very lightly soiled laundry, however, often comes clean at 40°C. The spin speed can be selected freely.

### Quick

Fast program for laundry that just needs freshening up. The program can be run at any temperature, so follow the washing instructions for each garment. The lower the selected temperature, the shorter the program time. Garments worn next to the skin ought to be washed at 60°C. The spin speed can be selected freely.

### Synthetic

Program for synthetics, blended materials, and permanent press cotton. Suitable for shirts and blouses. The temperature can be selected freely, so follow the washing instructions for each garment. Garments worn next to the skin ought to be washed at 60°C. Many synthetics will come clean at 40°C too. The maximum spin speed is 800 rpm.

### Wool/Hand

A gentle laundry program for wool, silk, and garments that should be washed by hand. The highest temperature is 30°C. This program has a short spin. The maximum spin speed is 800 rpm.

# Washing

## Rinse

This program performs one cold rinse cycle + spin. Suitable for laundry that just needs to be dampened and for cleaning cloths and mops.

### Programme chart

Program	Pre-wash	Main wash	Temp. °C	Rinses (number)	Max. RPM	Max. load	Water consumption (approx. liter)	Energy consumption (approx. kWh)	Programme time (approx. min)
Heavy cotton	Yes	Long	95	5	1600	1/1	75	2,2	170
	Yes	Long	60	5	1600	1/1	65	1,2	160
White cotton	No	Long	60 <sup>1)</sup>	3	1600	1/1	59	1,19	155
	No	Long	40 <sup>2)</sup>	3	1600	1/1	60	0,5	140
Cotton eco	No	Short	60 <sup>3)</sup>	3	1600	1/1	60	0,9	90
	No	Short	40 <sup>3)</sup>	3	1600	1/2	45	0,5	85
Coloured cottons	No	Short	60	3	1600	1/2	45	0,5	80
	No	Short	40	3	1600	1/2	45	0,4	75
Quick	No	Short	60	2	1600	1/2	30	0,5	45
	No	Short	40	2	1600	1/2	30	0,4	40
Synthetic	No	Short	40	3	800	1/2	35	0,3	80
Wool/Hand	No	Short	30	3	800	1/3	80	0,5	45
Rinse				1	1600	1/2	8	0,1	20
Spin					1600	1/2		0,1	15

<sup>1</sup> Test program in accordance with EN 60456.

<sup>2</sup> 40°C program for test institute. Option function 40°C must be selected.

<sup>3</sup> Short program for test institute. Option function 40°C or 60°C must be selected.


## Spin or Drain

To be used when you only want to spin the load or drain the water from the machine.

# Washing

## 6 Select options and settings

By changing options and settings you can adjust the washing program to suit your own specific requirements.

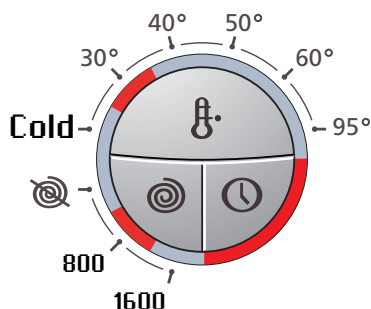

### Temperature

Select temperature by pressing the Temperature button until the red field lights up beside the desired temperature.

You can select temperatures between 30°C and 95°C or Cold. If you select Cold, the washing temperature will be the same as that of the water coming into the machine.

For Wool/Hand it is not possible to select a temperature higher than 40°C. See the table.

### Spin speed/No spin

Select the spin speed by pressing the Spin button until the red field next to the spin speed you want lights up.

You can select speeds between 800 and 1600 rpm, No spin

Spin at 800 rpm always signifies short spin.

For certain programmes, it is not possible to select a speed in excess of 800 rpm (see table).

No spin means that the program does not include a spin cycle and ends by draining.

### Delayed Start

When you select Delayed Start, the machine will start 1-24 hours after you press the Start/Stop button.

- Press the Delayed Start button the same number of times as the number of hours

you want to delay the start by (1-24 hours). A lighted red field next to the button indicates that the option has been activated.

- The number of hours delay until start is shown in the display window.
- Press the Start/Stop button.
- The number of hours to start is displayed with a countdown one hour at a time.
- Cancel Delayed Start by pressing the Start/Stop button for 3 seconds. The red field will go out.

### Important!

Remember to press Delayed Start **followed by** the Start/Stop button to start the programme.

# Washing

## 7 Close the door and press the Start/Stop button



### Time remaining

The time remaining is shown in hours and minutes. The time counts down in minutes as the program runs. Once a program is selected, the estimated program time is displayed. This may differ from time to time depending on the temperature of the water entering the machine and the size of the load. If the program time is longer than the previous wash with the same program, "1" will be displayed until the program finishes. This is normal! The next time you use the program under similar conditions, the estimated program time will be more accurate.

### To add or remove washing after the program starts

If you want to add or remove items after the programme has started, you can stop the programme by pressing and holding the Door opening button (key symbol) for three seconds. The red field will flash. When you restart the machine, add any extra detergent needed and close the door. The machine continues automatically from the point where the programme was interrupted.

### Stopping or changing a programme

You can also stop a programme by pressing the Start/Stop button for three seconds. To restart the machine, select a new programme, add any extra detergent needed and press the Start/Stop button.

## 8 Once the program has finished

Once a programme is finished, "END" appears on the display.

The door opens automatically once the program has finished. If you want to deactivate "automatic door opening", see the Child safety chapter.

- Remove the laundry.
- Turn off the main power switch, and you will save energy.


If you have small children or pets at home, close the washer door once you have removed the laundry.

# Care and cleaning


## Checking the filter and drainage pump

The washing machine has a filter, where coins, hairpins and the like can get caught. To clean the filter and drainage pump:


1. Make sure the machine is empty of water and that it is switched off at the mains.

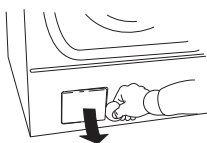

 
2. Open the hatch for the drainage pump as shown in the illustration.




3. Drain out the water, into a bowl, for example, by unhooking the drainage hose from the pin inside the hatch.

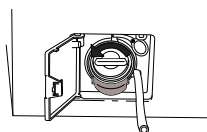

4. Open the pump by screwing the cover anti-clockwise. Remove the cover with the filter.

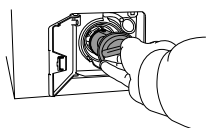

 
5. Remove any objects or rubbish from the pump housing. Check to see that the pump blades, right at the back, will rotate.




6. Screw on the cover, replace the drainage hose on the hatch pin and close the hatch.

## Cleaning the detergent compartment

Pull the detergent compartment out as far as it will go.

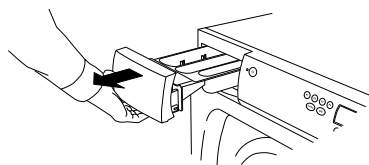

Then pull it up and out as shown in the illustration.

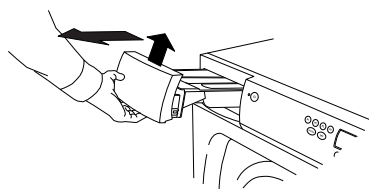

Rinse the compartment and scrub it clean. Replace the compartment.

### Note!

Do not run the detergent compartment through a dishwasher!

## Cleaning the outside of the machine

Clean the outside of the machine and the program panel with a mild cleaner. Do not use any solvents, as these can damage the machine.

### Note!

Do not hose down or spray the machine with water.



# Care and cleaning

## **Cleaning the inside of the machine to avoid unpleasant smells**

Modern detergents often allow clothes to be washed at low temperatures. This means that small deposits can build up in the machine. These, in turn, may lead to unpleasant smells developing.

To avoid this, we recommend running a 95°C wash programme once a month. When you do this, use a small quantity of detergent. It is not necessary to put any washing in the machine.


# Care and cleaning

## Rinse holes under the agitator


If you think that an object, such as a nail or a paper clip, may have fallen through the wash drum, you should check the container under the agitator. Objects of this kind can rust and cause spots on clothing. Nails and other sharp objects can make holes in fabric.

### Do as follows:

1. Use a screwdriver or similar tool.
2. Insert the screwdriver into the central hole on the agitator and turn the screwdriver handle gently to the left.

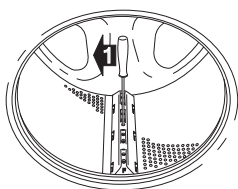

3. With your other hand, hold the agitator and pull it towards you as shown in the illustration.
4. Lift the agitator.

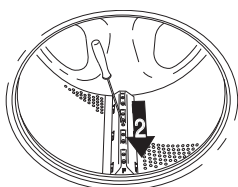

5. Remove any objects.
6. Place the agitator in the mounting hole with the F-mark towards you. Ensure that all the agitator fasteners are in their holes in the drum. Push it away from you until it catches.

## If you have hard water

If you live in an area with hard water (limescale), the washer drum may develop a greyish-white coating. To remove this, empty a sachet of citric acid, approx. 20gram, into the washer drum and run the Heavy white programme at 95°C. Repeat if necessary.


# Troubleshooting

## The washer door will not open


1. Check that the main power switch is on.
2. Has the power supply been cut off? Check the house fuses (circuit breakers). The washer door cannot be opened using the button with the key symbol if the power supply has been cut off.

### If nothing else works, the washer door can be opened as follows:


- This must only be done in an emergency if the machine's glass door does not open automatically when the programme has finished.
- First check that there is no water left in the machine. If there is any water left and you are unable to run the Drain program, empty the machine by detaching the drainage hose. This is described under the heading "Checking the Filter and Drainage pump", in chapter 11, "Care and cleaning".
- Make sure that the mains power switch is off and that the plug has been removed from the wall socket.
- Open the hatch to the drainage pump, bottom left as shown in the illustration.

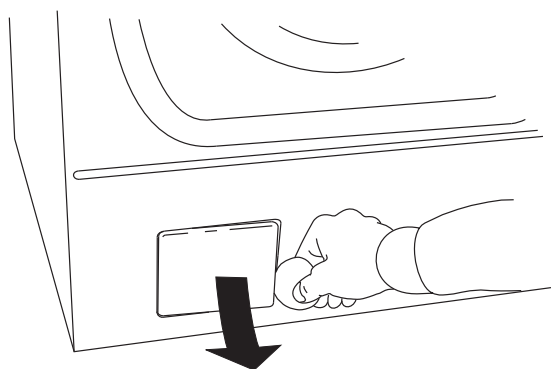

- Unfasten the screws holding the red plastic handle in place.

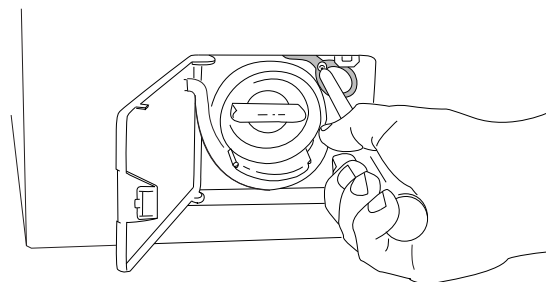

- Pull the handle and the door opens.

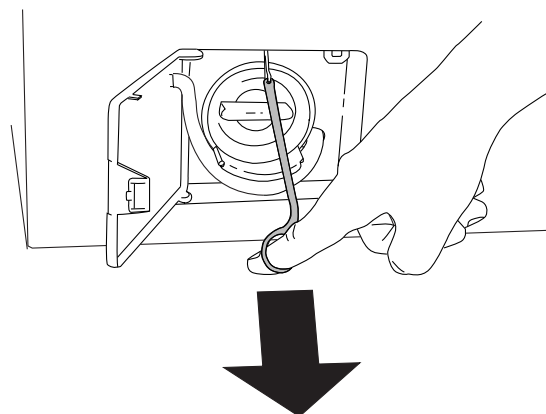

- Insert the handle back into its slot and screw it tight. Close the hatch to the drainage pump.

If the machine's glass door does not open the next time a washing programme has finished, call the service division.

## The machine will not start

1. Is the washer door properly closed? Push it firmly.
2. Is there power? Check your home's fuses.
3. Check that you have not selected Delayed Start. Stop the programme if you want.

# Troubleshooting

## Error messages

The display indicates if an error has occurred during the program. After taking the measures described below, turn off the machine to leave error message mode.

The error messages that may be shown are:

### The door is not closed

If the first red field beside the Start/Stop button is flashing, you have tried to start a programme with the door open. Close the door and the programme will start.

### Over filling

If F1 is flashing in the display.

1. Shut off the water tap.
2. Call the service division!

### Drainage error

If F3 is flashing in the display, there is a problem with drainage. Check:

- that no objects are stuck in the drainage hose outlet.
- that the drainage pump is not blocked by foreign objects. Clean the pump (see the "Care and cleaning" chapter).
- that there are no kinks in the drainage hose.

After taking the necessary action, run the Drain programme or press the Door Open button (key symbol) to empty the machine. If this does not resolve the problem, call the service division!

## Water intake error

If F4 is flashing on the display.

Fault with water supply. Check:

- that the tap on the water pipe is open.
  - that the filter in the machine's water intake is not blocked.
1. Shut off the water tap.
  2. Unscrew the hose.
  3. Clean the filter in the intake valve on the machine.
  4. Screw the hose back on.
  5. Turn on the tap.
  6. Run the program again to check if the fault is fixed.
  7. If this does not resolve the problem, call the service division!

## Door opening error

if F6 is flashing on the display, call the service division!

# Technical information

## Technical data

Height:	850mm
Width:	595mm
Depth:	585mm
Weight:	73 (78)kg (with outer door)
Cylinder volume:	50l
Max. washing capacity:	7kg
Spin speed (rpm)	800 - 1600
Rated power:	See type plate.
Heater output:	See type plate.
Water pressure:	0,1 - 1 MPa 1 - 10 kp/cm <sup>2</sup> 10 - 100 N/cm <sup>2</sup>
Wash drum and liquid compartment material:	Stainless steel
Outer casing material:	Powder-coated and hot-galvanized sheet steel or stainless steel.
Water connection:	1,5m pex pipe
Drain:	1,7m polypropylene hose

## Standard tests


Europe:	EN 60456
Washing program:	White cotton, 60°C, 7 kg cotton
Connection:	Cold water 15°C
Test method for noise measurement:	IEC-60704-2-4

Power requirement when machine turned off	< 0,2 W
Power requirement for time-delayed start	< 9,0 W
Power requirement when programme finished	< 9,0 W


# Transport protection

Before the machine is used, the three transport protection devices should be removed as shown below.


Each transport protection device consists of a screw, a washer and a rubber spacer. After the protection device has been removed, the rubber spacer acts as a plug for the holes for the device and also as a damper.

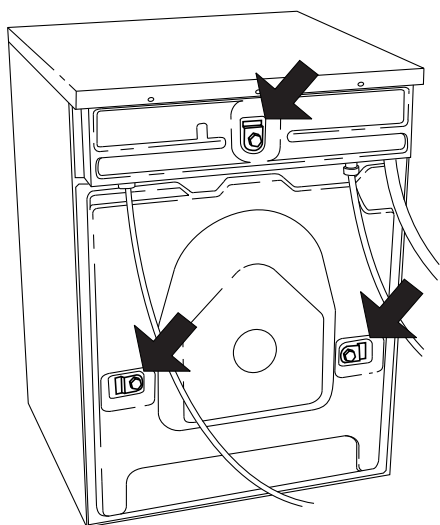


- First remove the screws and remove the washers.

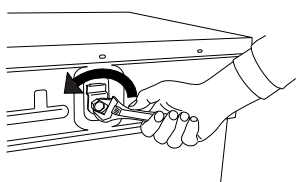

- Then remove the rubber spacers.

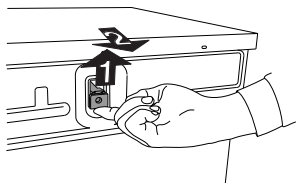

- Finally, the rubber spacers should be turned over and replaced in the transport protection device holes.

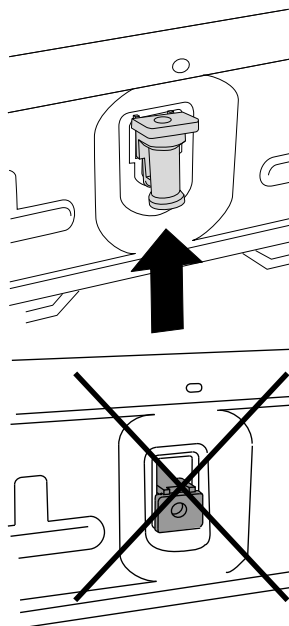

## Important!

In order to prevent the machine from being damaged when it is transported, use the transport protection device, which locks the entire inner compartment in place. If the transport protection device is missing, you can order one from your retailer.

Item number:

8064206 Rubber spacer

8901037 Bolt

8061767 Washer

Order three of each item!

# Installation

## Positioning the washing machine

The washing machine can be installed as a built-in or freestanding unit. Position the machine so that the electrical plug is easily accessible.

### A. Built-in


The washing machine can be installed under a counter top with a working height of 850 - 900 mm. Leave a 5 mm space around the machine, particularly between the rear edge of the top cover and the wall behind it.

### B. Freestanding

The washing machine can be positioned beside or under a dryer.

## Adjusting the feet


Keep the noise that the machine produces to a minimum by adjusting the feet so that the machine is steady and balanced on the floor. Tighten the lock nuts.

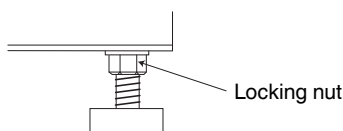

## Connection to water supply

Water connection should be carried out by a qualified professional. Connect the machine using the accompanying supply hose. Water pressure should be 0.1–1 MPa (approx. 1–10kp/cm<sup>2</sup> ; 10-100N/cm<sup>2</sup>). There should be a stopcock on the water pipe.

If the pipes are newly installed, it may be wise to flush them through so that any dirt is washed away. Otherwise, dirt can clog the filter in the machine's water intake and cut off the water supply.

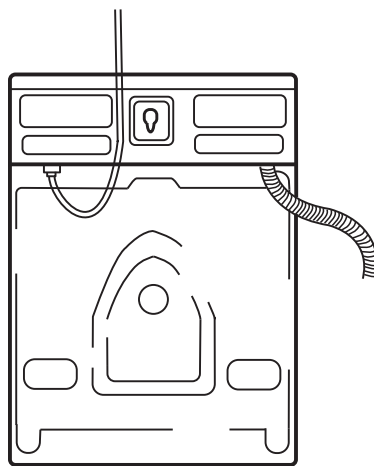


Only use the inlet hose supplied with the machine. Do not reuse old or other loose inlet hoses.

# Installation

## Drainage connection

The machine is supplied with a connected drainage hose that can be fastened to a laundry sink or similar. The height must be 600 - 900 mm above floor level.


The lower position (600 mm) is always preferable. Ensure that the drainage hose has no kinks.

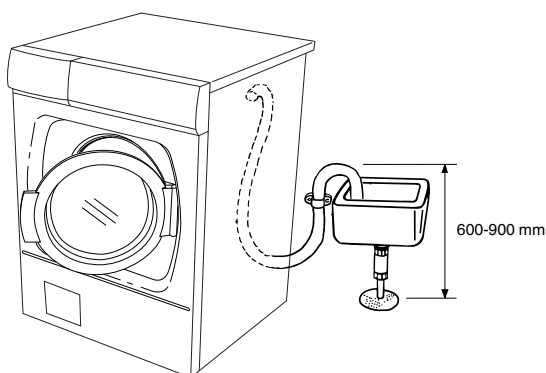

The machine can also be connected to the drain via a spigot connection. In this case the hose should also be 600-900 mm above the floor. The internal diameter of the hole should be at least 18 mm.

- Cut the nipple
- Remove burrs from the hole.

See the illustration.

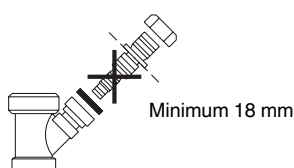

## Electrical installation

Electrical connections must be via a plug connected to an earthed wall socket or by cable for fixed installation, with all-pole disconnection, by a qualified professional.

### Connection on delivery

The machine is supplied as 1-fas, 230V, 50HZ with a plug, heat output 2000W and has a 10A fuse. Any earth fault fuses must be type A.

### Note!


Repairs and maintenance relating to safety or performance must be carried out by a qualified professional.

## Programme plate in multiple languages

Certain machines include double-sided programme plates in different languages (see the detergent compartment and the bag with the user handbook that comes with the machine).

You can replace or turn the card yourself to get the language most appropriate for you.

To remove the card from its holder in the detergent compartment, press the card with your thumb and push it sideways (see picture).

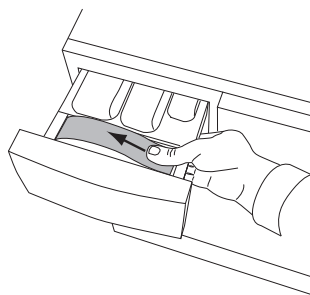

The card will then bend slightly and you can easily remove it. To fit the card, bend it slightly in order to easily insert it into the holder in the detergent compartment.





# Service

## Before contacting the service division

Before you contact the service division, make sure that you know the model designation, type designation and serial number.

The model designation can be found on the detergent compartment. Type designation and serial number can be found on the type plate above the washer door.

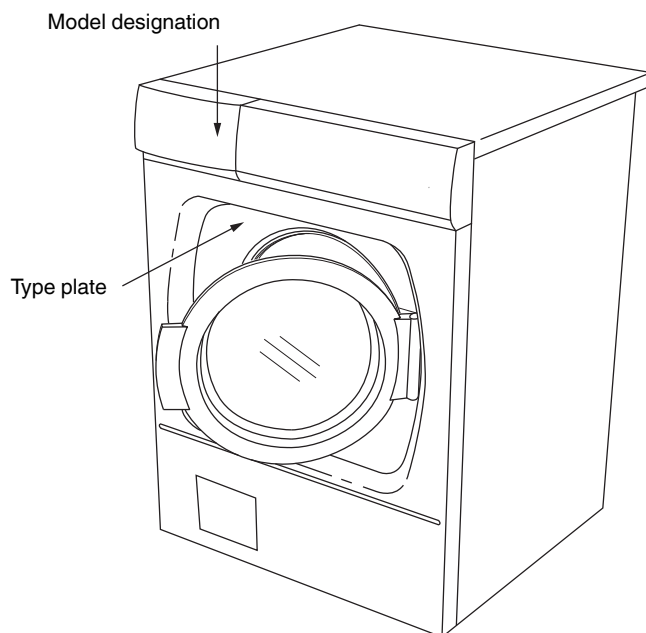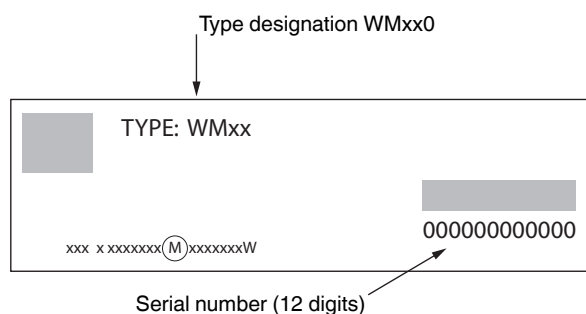

## Your notes

## Your notes

# Quick guide

## 1 Washing

- Empty pockets and refasten zips.
- Read the item's laundry label.
- Sorting laundry.


### Note!

Place underwired bras in a laundry net.

## 2 Load the laundry

- Press the main power switch.
- If the door is closed, press the Door opening button (key symbol). The red field lights up and the door opens after a few seconds.
- Load the laundry and close the door.

## 3 Detergent compartment

- Pour detergent into the main wash compartment, and pre-wash compartment as well if required. Pour fabric softener into the compartment on the right with the -symbol.
- If you use liquid detergent, follow the detergent manufacturer's recommendations.

## 4 Select the programme

- Select a programme by turning the programme selector.
- Select options and settings.
- Press the Start/Stop button.

## 5 Program finished

- The text END on the display indicates that the wash programme has finished.
- The washer door opens automatically once the programme has finished.
- Remove the laundry.
- Turn off the main power switch.

If you have small children or pets at home, close the washer door once you have removed the laundry.